

Pokini Tab K10 & K10B

4-Bay Battery Charger




Quick Start Guide

English





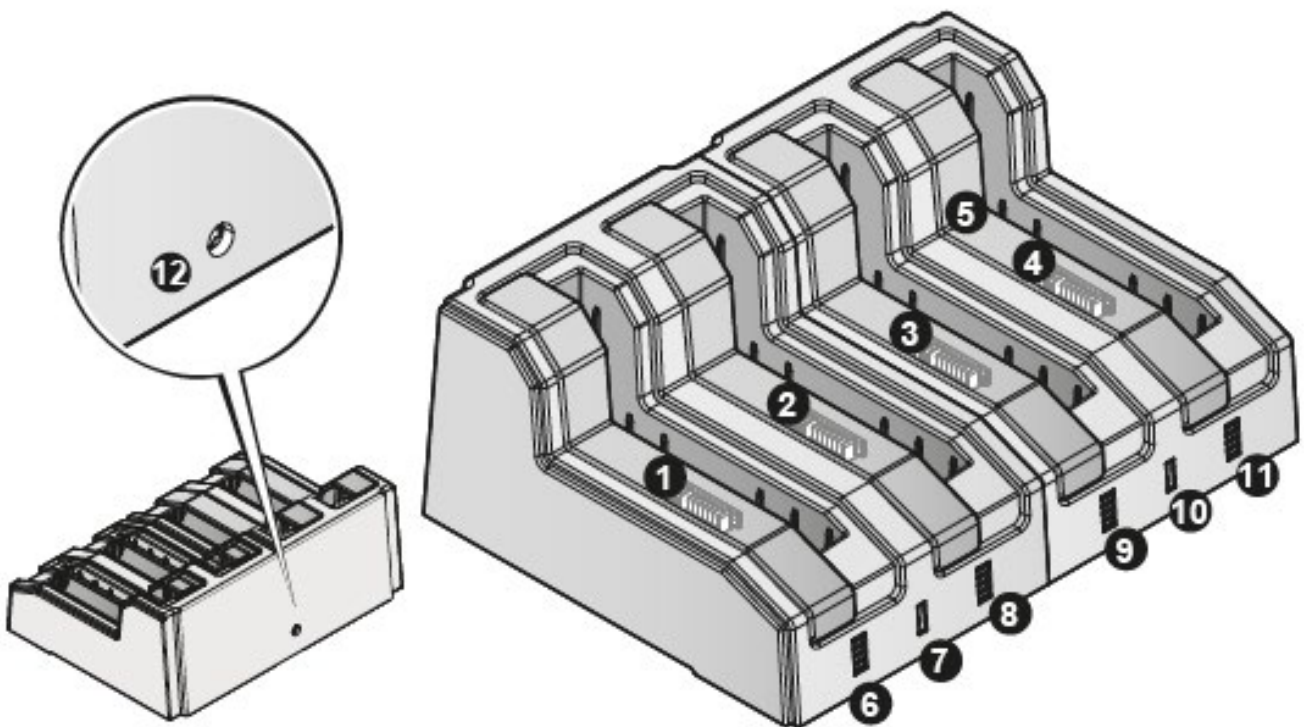

Overview

- | | |
|--------------------------|------------------------|
| ❶ Battery contacts 1 | ❷ Power LED 1 |
| ❸ Battery contacts 2 | ❸ Battery status LED 2 |
| ❹ Battery contacts 3 | ❹ Battery status LED 3 |
| ❺ Battery contacts 4 | ❺ Power LED 2 |
| ❻ Battery retention clip | ❻ Battery status LED 4 |
| ❼ Battery status LED 1 | ❼ DC-in jack* |





* It only supports the 19VDC (6.32A) AC adapter



LED Status

	Charge: ~ 20%
	Charge: ~ 40%
	Charge: ~ 60%
	Charge: ~ 80%
	Charge: ~ 100%
	Full charge

Charging 4500mAh battery

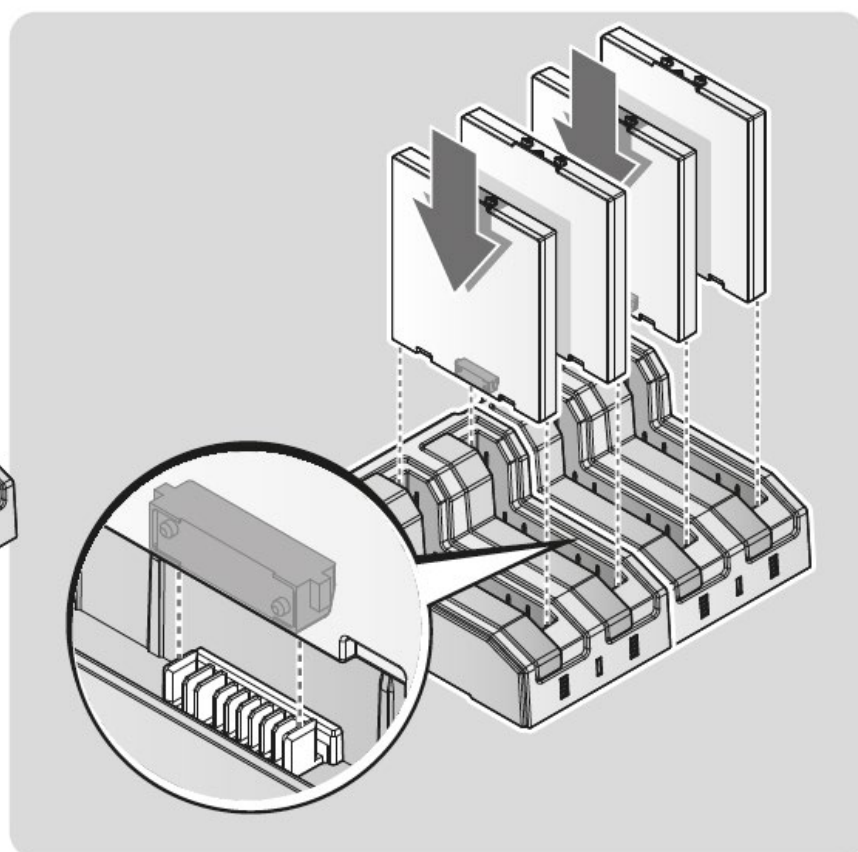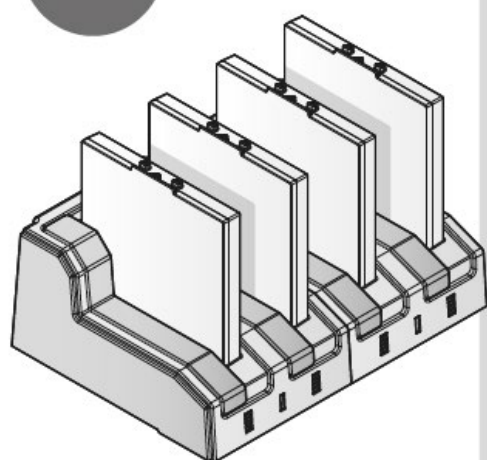

Charging 9000mAh battery

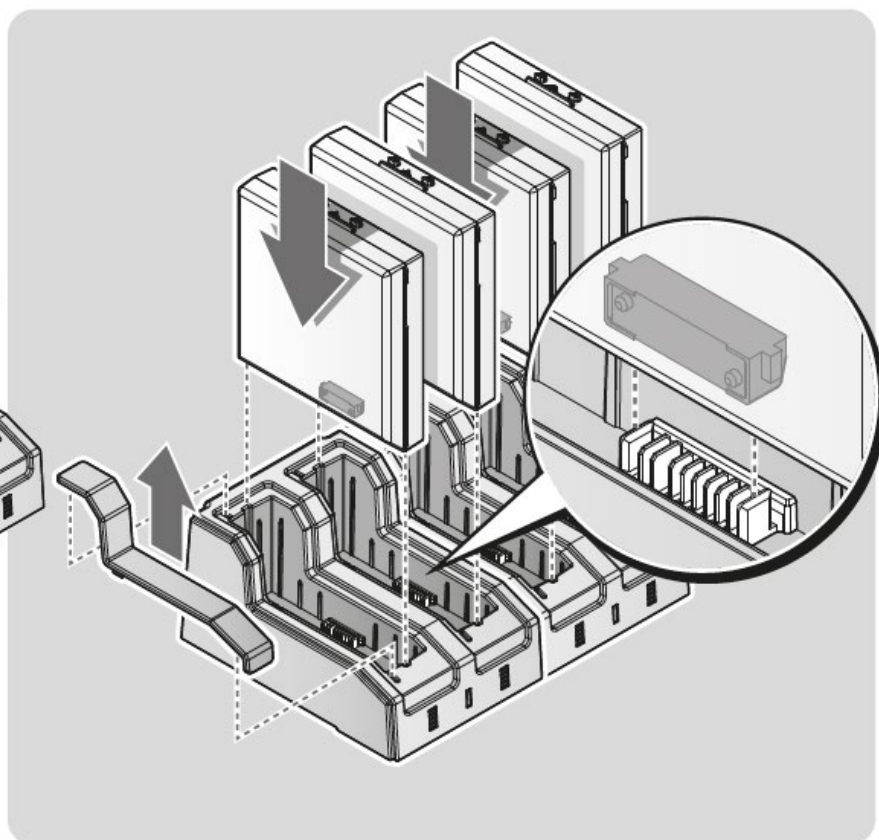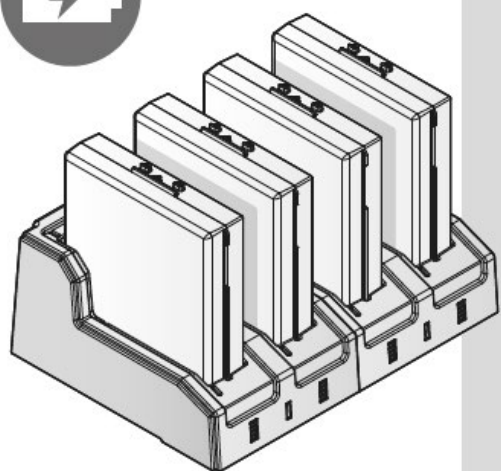

Support

You have any technical questions?

If you have problems or questions, please contact us by e-mail:

support@pokini.de

V1.1 / 10-2022

EXTRA Computer GmbH
Brühlstr. 12
89537 Giengen-Sachsenhausen
Deutschland / Germany

all rights reserved

www.pokini.de